

Quick Start Guide

Parani100

For Wireless Multi-Serial Communications,
based on Bluetooth Technology

SENA
www.sena.com



DB9 & RJ45 Pinouts

RS232 DB9 Pinout	Pin	Signal
	1	-
	2	RxD
	3	TxD
	4	DTR
	5	GND
	6	DSR
	7	RTS
	8	CTS
	9	-

DB9 Male serial port pinout for installation and RS232 Mode

Ethernet RJ45 Pinout	Pin	Signal
	1	Tx+
	2	Tx-
	3	Rx+
	4	NC
	5	NC
	6	Rx-
	7	NC
	8	NC

Ethernet RJ45 pinout for configurations and communications

Connection



Connect to host PC

①



Connect Ethernet cable

②



Connect Power supply

③

Installation

Connect the Parani100 to PC via RS-232 cable and open Hyper terminal program

Default Log-in ID/Password is admin/11111.

Set PC Com port: Baud rate 115200/8 Data bit/
non-parity/1 stop bit/no hardware flow control



Default IP mode of the Parani100 is "Static IP".
To configure the Parani100 using Parani100 Manager,
you need to change the IP mode to "DHCP IP" using a hyper terminal program.

Configuration

Configuration using the Parani100 manager or Web

Default Log-in ID/Password is admin/11111.



You may download the Parani100 manager and user manual from CD or Sena website at <http://www.sena.com/support/downloads/>.

For more information, refer to the user manual.

Visit us at www.sena.com

Copyright 1998-2005, Sena Technologies, Inc. All rights reserved.