

Quick Start Guide

PS110

HelloDevice Pro Series



Set DIP Switch & Pin-outs




Set serial DIP switch according to your serial device requirements(RS-232/422/485)

DIP Switch Setting		ON	ON	ON
		1 2 3	1 2 3	1 2 3
		RS-232 Mode	RS-422/485 Full Mode	RS-485 Half Mode
	1 2 3 4 5			
	6 7 8 9			
		RS232 (console and serial ports)	RS422 (serial ports only)	RS485 (serial ports only)
DB-9 Pinouts	1	DCD	Tx+	Tx+
	2	Rx	RX+	RX+
	3	Tx	RTS+	-
	4	DTR	CTS+	-
	5	GND	GND	GND
	6	DSR	TX-	TX-
	7	RTS	RTS-	-
	8	CTS	RX-	RX-
	9	-	CTS-	-

* Please note that the power of the Pro Series should be turned off before changing the serial communication type.

Connection

① Connect serial device

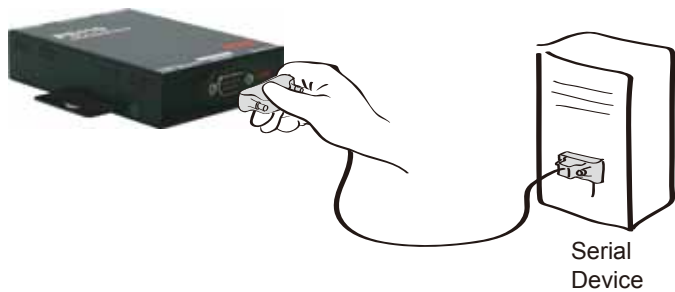

② Connect Ethernet cable



③ Connect Power supply



Configuration

User can choose one of the following processes

Default Log-in ID/Password is root/root.

1. Configuration using the HelloDevice manager
3. Configuration using the Web



2. Configuration using the Hyper terminal or Telnet

Connect to host PC. Then, slide Data/Console switch to the Console side.

Set up the serial configuration parameters of the terminal emulation program as follows:

9600 Baud rate/8 Data bits/None Parity/1 Stop bits/
No Hardware flow control

After login, "editconf" command will allow you to get into the text-menu driven interface. Then menu screen is displayed.



HelloDevice Manager and User Manual are available for download from Sena website at <http://www.sena.com/support/downloads/>.

For more information, refer to the user manual.

Visit us at www.sena.com

Copyright 1998-2012, Sena Technologies, Inc. All rights reserved.