

Quick Start Guide

PS410

HelloDevice Pro Series



Set DIP Switch & Pin-outs



Set serial DIP switch according to your serial device requirements(RS-232/422/485)

DIP Switch Setting	ON	ON	ON
	1 2 3	1 2 3	1 2 3
	RS-232 Mode	RS-422/485 Full Mode	RS-485 Half Mode
DB-9 Pinouts	1 DCD	1 Tx+	1 Tx+
	2 Rx	2 RX+	2 RX+
	3 Tx	3 RTS+	3 -
	4 DTR	4 CTS+	4 -
	5 GND	5 GND	5 GND
	6 DSR	6 TX-	6 TX-
	7 RTS	7 RTS-	7 -
	8 CTS	8 RX-	8 RX-
	9 -	9 CTS-	9 -

* Please note that the power of the Pro Series should be turned off before changing the serial communication type.

Connection

① Connect serial device

② Connect Ethernet cable

③ Connect Power supply



Configuration

User can choose one of the following processes

Default Log-in ID/Password is root/root.

1. Configuration using the HelloDevice manager
2. Configuration using the Hyper terminal or Telnet
3. Configuration using the Web



HelloDevice Manager and User Manual are available for download from Sena website at <http://www.sena.com/support/downloads/>.

For more information, refer to the user manual.

2. Configuration using the Hyper terminal or Telnet

Connect the host PC and PS410's console port using a serial console cable.

Set up the serial configuration parameters of the terminal emulation program as follows:
9600 Baud rate/8 Data bits/None Parity/1 Stop bits/
No Hardware flow control

After login, "editconf" command will allow you to get into the text-menu driven interface. Then menu screen is displayed.



Visit us at www.sena.com

Copyright 1998-2012, Sena Technologies, Inc. All rights reserved.