

VTS Manager

Getting Started

- setup_vts_manager-v*.*.exe . v*.*. VTS Manager

- VTS Manager

- VTS Manager
- "Log-In" "File > Login"
- "Log-in" "admin"
- "OK"

/ 가

- "Probe" "Device > Probe"
- "Probe" "Start"
- "Add"
- 가 가

- Device > Configure Web Interface HTTP, Web Interface HTTPS, Telnet SSH

- HTTP / HTTPS Telnet/SSH

- SSH VTS Device Configure Tools SSH

- SNMP-nms
- SNMP . SNMP

VTS VTS Manager

- SNMP Windows / / SNMP

- "Device ID / Password"
- root ID
- "OK"
- "Get Parameters" "Device / Get Parameters"
- "Start"
- "System Information", "Network" "Serial port"

- "Firmware" "Device > Upgrade Firmware"
- "Upgrade firmware" TFTP server IP, Hash file name

- "Start"
- TFTP server VTS

-
- "Port > Connect"

- Java Telnet Applet
- Port Connect Tools
- Port Connect Tools VTS Manager